


# D-VTA 200

## Video-based Thermography for Cement Plants

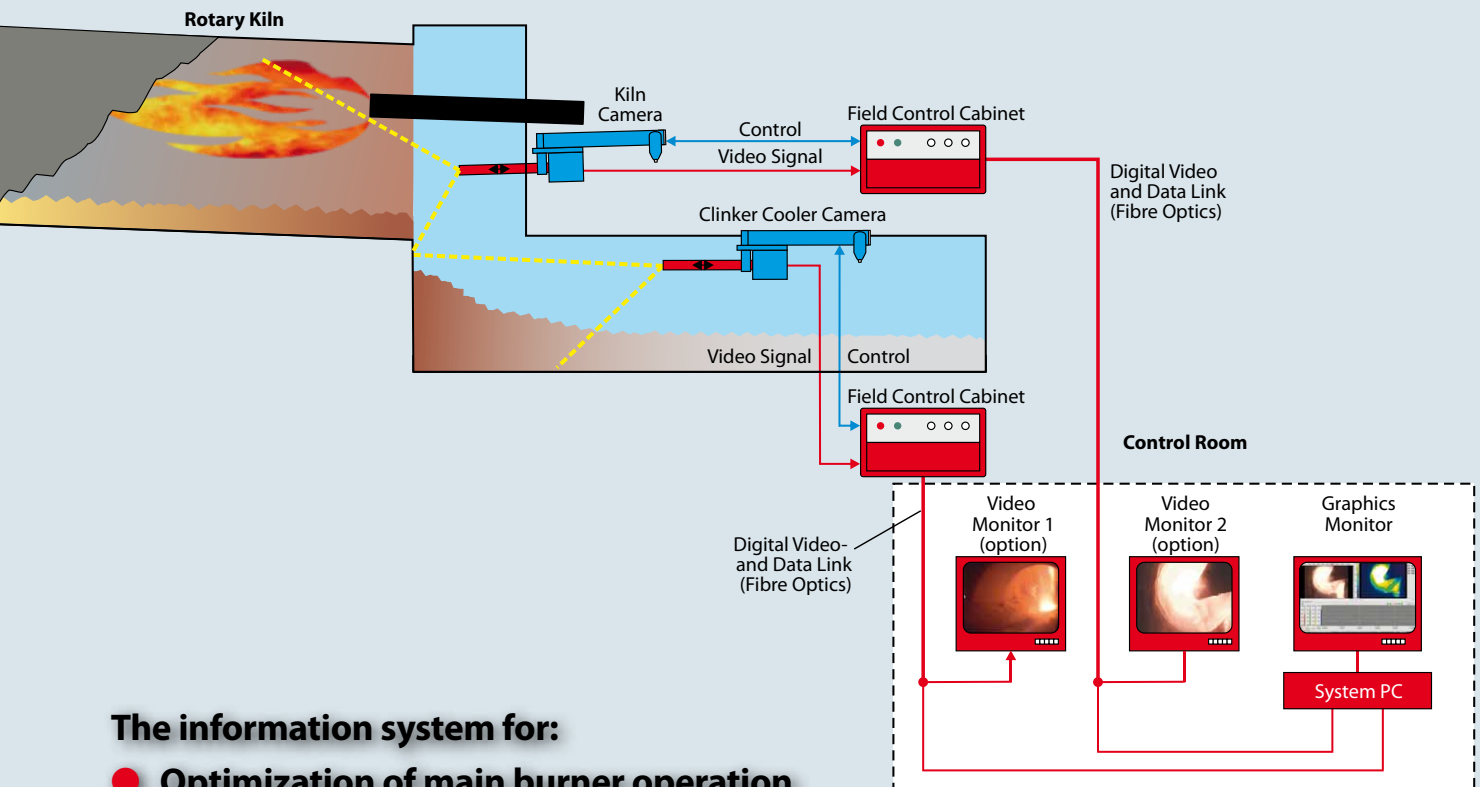

The information system for:

- Optimization of main burner operation
- Secondary fuel control
- Free lime prediction
- Stabilization of product quality
- Detection of „snowman“ and „red river“
- Optimization of maintenance and repair cycles

# Video Monitoring

## The D-VTA 200 video and thermography system

is a modular system specially developed for use in the cement industry, to monitor the clinker manufacturing process. Intelligent sensors allow contactless, optical and thermal online analysis of processes in the sinter zone in rotary kilns and in clinker coolers.

### The sensors

have been specially developed for the harsh working conditions of the cement industry.

The sensor housing contains the special video-scope or boroscope as optical system, the industrial CCD camera and the spectroscopy components. In this design all electronic components are operated outside the kiln area, in the cooled camera housing.

The slim, water-cooled sensor shaft (Ø 43mm) minimises the mechanical stress (abrasive dust) and the thermal influence on the sensor parts in the combustion chamber.

The optical system is protected against mechanical and thermal damage by sapphire glass at the sensor tip, in addition to air flushing. As no moving parts (no mirrors, prisms or motors) are located in the process-oriented area, the sensors achieve a high availability with minimum service requirement.

### The field components

- pneumatically operated retraction system with monitoring units for the cooling and flushing media, including integrated air accumulator
- Field control cabinet for control of the sensors, operation of the optional spectrometers and the signal processing for the data and video transmission via fibre-optic cable to the control room.

### The control room equipment

- System computer for temperature calculation, thermography presentation and spectroscopy data processing for free lime prediction
- Video monitor for live color image of the process.

### The video system

The basic system comprises the above-mentioned system components, without system computer.

It enables real-time colour video display, visual monitoring of the process sequence in the sinter zone in the kiln outlet/clinker cooler and provides information with regard to:

- Flame form and position
- Main burner position and state
- Clinker formation: Consistency, thickness, caking; ring formation, „snowman“ and „red river“.



Video image from the rotary kiln



Combustion chamber sensor with retraction unit (water-cooled)



Anneliese Zementwerke Gesecke, Germany



ROMCIF Fieni, Romania

# Thermography

## The thermography analyzing system

The thermography system comprises the components of the video system plus the system computer with software modules.

It operates as a spatial optical pyrometer on the basis of image data processing and offers, in addition to the video system:

- Temperature determination of each visible image point of the video sensor
- Thermal analysis of the local temperature distribution
- Temperature definition within freely definable measuring window and lines (ROI = Region of Interest / LOI = Line Of Interest).
- Analysis of thermal samples to identify anomalies in the burning and cooler process

All data of the thermography system can be transmitted to the process control system via a standardized data interface.

## The spectroscopy system with free lime prediction


In addition to the components of the thermography system, spectrometers are required in the field PC of the field control cabinet, as well as quartz glass fibre-optics for connection to the sensor. The spectroscopy system analyses the radiation from the combustion and sinter process in the rotary kiln. It expands the scope of performance of the video and thermography system by the following functions:




Rohrdorfer Zement Rohrdorf, Germany

# Analysis System

- Measurement of the flame and clinker temperatures (reference)
- Assessment of the thermal influence of the main burner flame on the burning process (radiation behaviour and temperature transition).
- Free lime prediction from correlation of spectroscopy data and process data (DURAG patent). This prediction indicates the process trend sensitively and at an early stage, providing the possibility of process optimization.

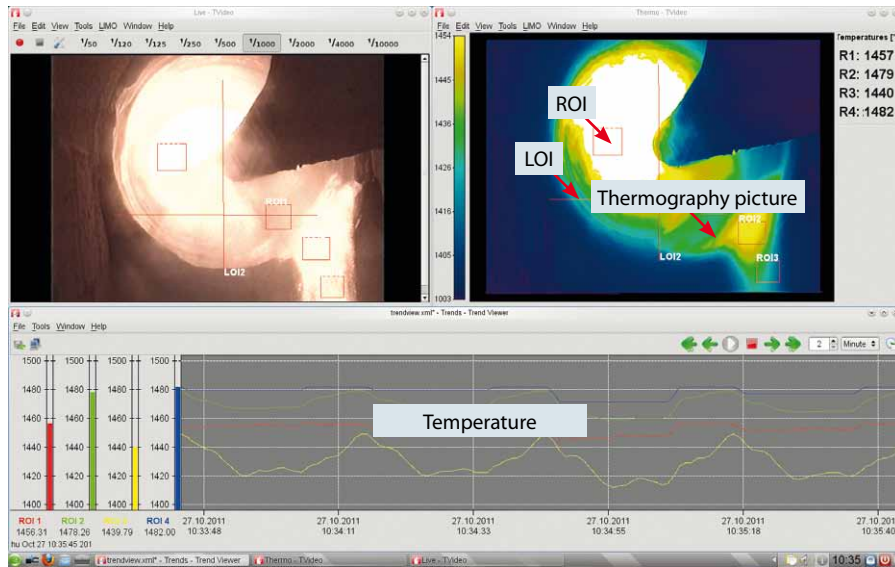

The user interface of the thermography analysis system

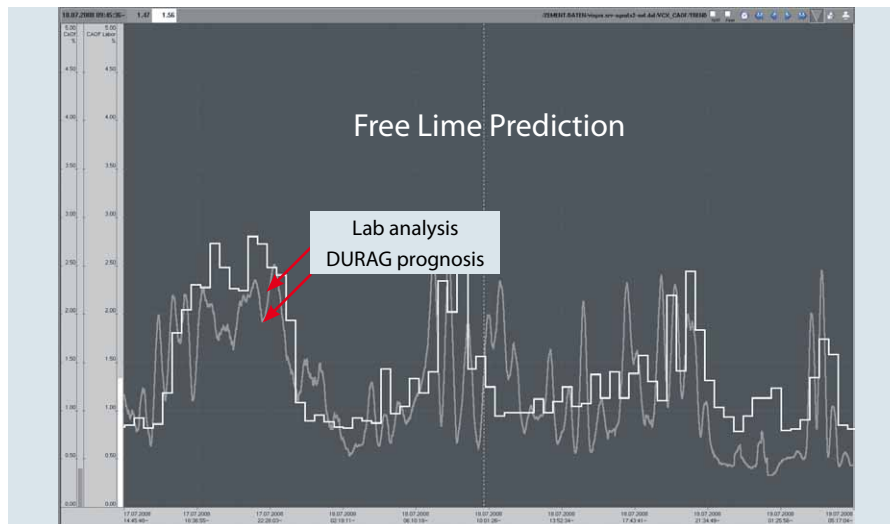

Free lime prediction



Holcim Siggenthal, Switzerland



W&P Wietersdorf, Austria

## Technical data

<b>Video system</b>	PAL, picture elements: 752(H) x 582(V), fixed focus
<b>Thermography from total radiation</b>	Temperature range 1000°C – 2000°C
<b>Optical alignment</b>	Sensor 0°: axially-parallel to sensor axis, Sensor 45°: angled 45° to sensor axis
<b>Optical field of view</b>	Sensor 0°: horizontal 72°, vertical 54°, diagonal 90°; Sensor 45°: horizontal 48°, vertical 36°, diagonal 60°
<b>Data interfaces on the system PC</b>	RS232, RS422, RS485; ASCII, MODBUS; Ethernet: TCP/IP; FTP, MODBUS
<b>Auxiliary energy</b>	230 V / 60 Hz & 115 V / 50 Hz, 500 VA
<b>Gas temperature the kiln or cooler</b>	Water-cooled sensor <2000°C
<b>Ambient temperature</b>	Sensor / Retraction: 0°C...60°C, Field control cabinet: 0°C...55°C
<b>Material</b>	Sensor: stainless steel 1.4571 / 1.4301, Field cabinet: steel sheet, painted in RAL 7035
<b>Dimensions / Weights</b>	Diameter of sensor tip: water-cooled 43 mm
<b>Immersion depth the kiln or cooler</b>	max. 450 mm from welding plate
<b>Space requirement for sensor / retraction device</b>	1450 x 500 x 800 mm (LxWxH)
<b>Field cabinet</b>	600 x 380 x 210 mm (HxWxD)
<b>Cable length</b>	Sensor/Retraction – Field control cabinet 10 m
<b>Connection Site / Control Room</b>	Optical Fiber, max. 1000 m
<b>System PC</b>	19" industrial housing, 4 HE, depth 450 mm
<b>Weights</b>	Sensor with retraction and carrier 70 kg, field control cabinet 15 kg
<b>Cooling water volume</b>	350 l/h, 1.5...8 barg
<b>Cooling water temperature</b>	Inlet: <45°C, Outlet: Temperature increase <10° C
<b>Cooling water quality</b>	Clean, chemically neutral, non-corrosive, Hardness: <5°dH / <28 mMol/l
<b>Compressed air volume</b>	max. 25 Nm <sup>3</sup> /h
<b>Compressed air pressure</b>	5 – 8 barg
<b>Compressed air temperature</b>	5...40°C
<b>Compressed air quality</b>	dry, free from dust, aerosols, oil quality



Buzzi Unicem Vernasca, Italy



## DURAG

### DURAG GmbH

Kollaustraße 105  
22453 Hamburg, Germany  
Tel. +49 40 55 42 18-0  
Fax +49 40 58 41 54  
E-Mail: info@durag.de

### DURAG Niederlassung Nord

Kollaustraße 105  
22453 Hamburg, Germany  
Tel. +49 40 55 42 18-0  
Fax +49 40 58 41 54  
E-Mail: DURAG-Nord@durag.de

### DURAG Niederlassung Ost

Halsbrücker Straße 34  
09599 Freiberg, Germany  
Tel. +49 3731 30 04-0  
Fax +49 3731 30 04-22  
E-Mail: DURAG-Ost@durag.de

### DURAG Niederlassung Süd

Weidenweg 16  
73087 Bad Boll, Germany  
Tel. +49 7164 912 25-0  
Fax +49 7164 912 25-50  
E-Mail: DURAG-Sued@durag.de

### DURAG Niederlassung West

An der Pönt 53a  
40885 Ratingen, Germany  
Tel. +49 2102 74 00-0  
Fax +49 2102 74 00 28  
E-Mail: DURAG-West@durag.de

## International

### DURAG, Inc., USA

1355 Mendota Heights Road · Suite 200  
Mendota Heights · MN 55120, USA  
Tel. +1 651 451-1710  
Fax +1 651 457-7684  
E-Mail: durag@durag.com

### DURAG India Instrumentation Ltd

#27/30, 2nd Main Road  
Industrial Town, Rajajinagar  
Bengaluru 560 044, India  
Tel. +91 80 2314 5626 / 4215 1191  
Fax +91 80 2314 5627  
E-Mail: info@duragindia.com

### DURAG France S.a.r.l.

Parc GIP Charles de Gaulle  
49, rue Léonard de Vinci, BP 70166  
95691 Goussainville CEDEX, France  
Tel. +33 1 301 811 80  
Fax +33 1 393 383 60  
E-Mail: info@durag-france.fr

### DURAG Italia S.r.l.

Via Carlo Panseri, 118, CIM uffici, P. secondo  
28100 Novara, Italy  
Tel. +39 0321 679569  
Fax +39 0321 474165  
E-Mail: info@durag.it

### DURAG UK Office

Suite 17, Brookside Business Park  
Cold Meece, Stone, Staffordshire  
ST15 0RZ, United Kingdom  
Tel. +44 1785 760 007  
Fax +44 1785 760 014  
E-Mail: durag.uk@durag.de

### DURAG Instrumentation (Shanghai) Co., Ltd.

Room 706, Dibao Plaza, No. 3998 Hongxin Rd.  
Minhang District, Shanghai, 201103 PR China  
Tel. +21 60732979-206  
Fax +21 60732980  
E-Mail: lianggc@durag-cn.com

### DURAG Japan Office

c/o TMS Planning Inc.  
291-2 Umena, Mishima-shi, Shizuoka-ken,  
411-0816 Japan  
Tel./Fax: +81 55 977 3994  
E-Mail: saito@durag.jp

### DURAG Korea Office

RM #1131, Manhattan Building,  
36-2, Yeouido-Dong, Yeongdeungpo-Gu, Seoul,  
Korea  
Tel. +82 2 761 8970  
Fax +82 2 761 8971  
E-Mail: mac\_lim@durag-group.co.kr

### DURAG Brazil Office

Rua José Amaro Pecanha, 58  
05126-150 Sao Paulo - SP, Brazil  
Tel. +55 11 3902 3306  
Fax +55 11 3902 2382  
E-Mail: ednaldo@durag.com.br



### DURAG data systems GmbH

Kollaustraße 105,  
22453 Hamburg, Germany  
Tel. +49 40 55 42 18-3000  
Fax +49 40 55 42 18-3099  
E-Mail: info@durag-data.de



### DURAG process & systems technology gmbh

Kollaustraße 105  
22453 Hamburg, Germany  
Tel. +49 40 55 42 18-0  
Fax +49 40 58 41 54  
E-Mail: info@durag-process.de



### VEREWA Umwelt- und Prozessmesstechnik GmbH

Kollaustraße 105  
22453 Hamburg, Germany  
Tel. +49 40 55 42 18-0  
Fax +49 40 58 41 54  
E-Mail: verewa@durag.de



### Hegwein GmbH

Am Boschwerk 7  
70469 Stuttgart, Germany  
Tel. +49 711 135 788-0  
Fax +49 711 135 788-5  
E-Mail: info@hegwein.de



### SMITSVONK Holland B.V.

P.O. Box 180, 2700 AD Zoetermeer  
Loodstraat 57, 2718 RV Zoetermeer  
Netherlands  
Tel. +31 79 361 35 33  
Fax +31 79 361 13 78  
E-mail: sales@smitsvonk.nl

[www.durag.de](http://www.durag.de)